



NWS-DSA-01 Door Stop Alarm

Congratulations on your decision to purchase this very cost-effective Door Stop Alarm. This device will provide you with a good deterrent to anyone trying to enter through your room door, where you have placed this wedge-shaped alarm. Be sure to follow the instructions for maximum protection and remember that this device is a deterrent and users are encouraged to have alternative plans in place to protect themselves and their belongings.


Door Stop Alarm Introduction

The Door Stop Alarm is intended to both block unwanted intrusion into the room you are occupying whilst at the same time setting off a loud 120 dB alarm which will deter most intruders. Use the Door Stop Alarm in hotel rooms, apartments, or even your own home.

Many security products on the market today will only alert you after the intruder has entered. This device will not only activate an alarm but will prevent unwanted intruders from entering through the door where it is placed. If an intruder attempts to enter, the alarm will sound, and the unit will wedge underneath the door. Because of the wedge-shaped design and non-skid pad on the bottom of the unit, proper placement of this device will prevent the door from opening. Clearly this device is not meant for use with sliding doors.

Battery Replacement:

Make sure the on/off switch is in the "off" position. Turn the unit upside down and open the battery compartment. Install one 9-volt battery and close the compartment.

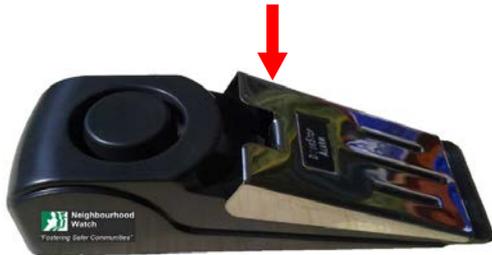

Operation

Place the unit on the floor, under the door which should be positioned directly below the door knob with the low end of the unit under the door but insure that the metal plate is not pressed down flush against the unit. Move the switch located on the back of the unit to the "on" position. If the door is opened it will strike the metal plate, preventing the door from opening and activating the alarm. The Door Stop Alarm is also equipped with a

movement sensor which will activate the alarm if the unit is moved. A sensitivity switch allows you to adjust the amount of movement required to set off the alarm.



Warning:

The high output siren fitted to this quality Door Stop Alarm may cause ear damage if used at close range for a prolonged period. Keep away from children and pets! This product is designed to be used as a deterrent and does not guarantee protection, or your personal safety.

Warranty:

Batteries are not covered by any warranty. Disconnect the battery if the alarm will not be in use for long periods of time. Whilst the product is made from tough ABS plastic, the manufacturer does not warrant the product against damage from being dropped or exposed to water (fluids). Like most things, occasionally there can be a failure which may have originated in the factory and we call this sort of failure as a Factory Defect. Generally, the defect presents right away or as soon as you test the unit. If for any reason you test your new Door Stop Alarm and find it does not work, pack it up and post it back to our offices with a note on the issue along with a copy of your Invoice (purchase receipt) and we will replace it promptly, postage paid back to you. Retain your purchase receipt for any warranty claims. The warranty period is 90 days from the date of purchase. Return all claims, postage paid to your point of purchase.

Neighbourhood Watch Shop Post Office Box 3065, Aberfoyle Park 5159 Telephone: (08) 8322-7705
Neighbourhood Watch Shop Pty Ltd as the Trustee for NHWS Trust ABN 60 548 176 369
Email: sales@neighbourhoodwatchshop.com.au