



NWS-WA1 Window and Door Alarm

Congratulations on your decision to purchase this very cost-effective Window and Door Alarm. This device can help alert you to intruders attempting to gain entry through your window or door depending on where you place the device. It takes only seconds to attach giving you peace of mind. Be sure to follow the instructions for maximum protection and remember that this device is only meant to alert you, so users are encouraged to securely lock their windows and doors.

Window and Door Alarm Introduction

This Window and Door Alarm is meant to be a quick and easy way to alert you to unexpected intruders either through your door or windows. It comes with double-sided tape so that you can apply it right to the surface you wish to protect. Ideally you will have purchased multiple Window and Door Alarms so that you can cover more than just one door or one window. The alarm will go off when the small piece (the magnet) is separated from the bigger piece as they need to be close together to prevent the alarm from sounding. This magnetic contact window door alarm, at only 65mm or 2 1/2 inches long, inconspicuously protects



your home from intruders. The unit uses a magnetic sensor to detect the opening of a protected door or window. A 110-dB alarm will then alert you to an attempted entry and scare off potential intruders. This device may also be used within the home to alert parents to children opening a gun or medicine cabinet or used to protect exterior doors, particularly those hard to protect sliding glass doors. Commercial uses include showcases and cash registers.

The owner may open the window or other protected object, without setting off the alarm by inserting a deactivation key. Once the deactivation key has been removed and the protected door or window is opened, the alarm will sound until the key is inserted or the door or window is closed.

Features:

- 1) Easy to install;
- 2) No wiring necessary;
- 3) The unit can be used as a personal property alarm to protect computers, TVs and videos;
- 4) Portable door security for your peace of mind while traveling;
- 5) Effective, low cost vibration and shock sensitive alarm that can be used for securing windows and patio doors;
- 6) Use the sticker at the back of the unit to stick the unit on glass pane, door or window.

Operation:

- 1) Turn the switch at the left side to 'high' or 'low' to begin operating. A signal will be given out to announce the unit is in good condition. When the glass is hit, knocked or cut by anyone, the siren will sound for 10-20 seconds and then reset.
- 2) The unit can be set to high or low sensitivity. 'High Sensitive' mode will detect a little vibration. 'Low Sensitive' mode will need a stronger vibration to make the unit react.
- 3) The unit will also perform well on wooden or metallic windows and doors.
- 4) If the unit is not placed in the middle of the door or window, use 'High' mode.
- 5) Effective, low cost vibration and shock sensitive alarm that can be used for securing windows and patio doors;

Battery Replacement:

This unit requires three (3) LR44 button cell batteries (included). When alarm appears weak, the batteries will need to be replaced. Use a small screw driver to remove the four screws on the back of the unit and insert the new batteries following the polarity diagram.

Warranty:

Batteries are not covered by any warranty. Disconnect the battery if the alarm will not be in use for long periods of time. The manufacturer does not warrant the product against damage from being dropped or exposed to UV light or water (fluids). Like most things, occasionally there can be a failure which may have originated in the factory and we call this sort of failure a Factory Defect. Generally, the defect presents right away or as soon as you test the unit. If for any reason you test your new Window/Door Alarm and find it does not work, pack it up and post it back to our offices (postage paid) with a note explaining the issue. Include a copy of your Invoice (purchase receipt) and we will replace it promptly, postage paid back to you. Retain your purchase receipt for any warranty claims. The warranty period is 90 days from the date of purchase.

Neighbourhood Watch Shop

Post Office Box 3065, Aberfoyle Park 5159 Telephone: (08) 8322-7705

Email: sales@neighbourhoodwatchshop.com.au

Neighbourhood Watch Shop Pty Ltd as the Trustee for NHWS Trust ABN 60 548 176 369